

## Clothes dryers (Cabinet type) and towel rails

**Safe use** advice for electric clothes dryers for drying textiles on racks located in a warm air flow and for electric towel rails intended for household and similar use. Rated voltage is no more than 250V.

Appliances not intended for normal household use, but which nevertheless may be a source of danger to the public—such as appliances for use by lay persons in shops, light industry and on farms—are covered by this advice.

This advice is not intended to replace specific manufacturer's information but can be used as a general guide.

This advice does not cater for young children or people who are physically weak.

When using the appliances:

- **WARNING** – Electric clothes dryers and towel rails are intended only for drying textiles washed in water only.
- An appliance fitted with a supply cord and plug and supplied from a cord extension set or an electrical portable outlet device, must be positioned so that the appliance is not subject to splashing or moisture getting in.
- For fixed towel rails - **WARNING** - To avoid creating a hazard for young children, this appliance must be installed so that the bottom rail is at least 600 mm above the floor.

You are urged to:

- Use the appliance only for its intended purpose.
- If the appliance is for indoor use only, do not use outdoors.
- Do not immerse the appliance in water unless it is designed for this purpose.
- Keep hands, fingers, feet, toes and hair away from dangerous moving parts, cutting blades and the like.
- Do not use electrical appliances in the rain.
- Make sure you have dry hands when operating an electrical appliance.
- Do not use a damaged appliance.
- An appliance may not be intended for use by children or people with an illness or disability without supervision.
- Young children should not be allowed to play with the appliance.
- Some appliances require special precautions for installation or user maintenance or both.
- The plug must be removed from the socket-outlet before any cleaning or maintenance is done.
- Do not place cord extension sockets or portable power outlet boards where they may be splashed or where moisture may get in.
- Ensure ventilation holes or outlets are not blocked or partially obstructed.

- If a fixed appliance does not have a supply cord and plug or other means for disconnection from the supply, a means for disconnection must be incorporated into the fixed wiring according to the Wiring Rules.
- If the supply cord or plug is damaged:
  - The manufacturer or its service agent or a similarly qualified person must replace the cord to prevent an accident.
  - Appliances with specially prepared cords must be replaced by a special cord or assembly available from the manufacturer or its service agent.
  - Other appliances that have a supply cord that cannot be replaced, should be scrapped.
- The appliance should be maintained in order to ensure a long, useful life and to protect the operator against electric shock or mechanical mishaps.
- A safety switch can enhance electrical safety when using electrical appliances